

# Silent-Cleaner SC3T-19G

## Instructions

- ① Please make sure the following parts are contained inside the package:  
Silent-Cleaner ..... 1  
3L Transparent Tank..... 1  
Suction Pipe..... 1  
Antistatic Hose..... 1  
Hose Clamp ..... 2  
Spare Filter (for dust collection) ..... 1
  - ② Put the Silent-Cleaner on top of the 3L transparent tank and fasten with the draw latches.
  - ③ Attach the antistatic hose with the suction mouth of the Silent-Cleaner and fasten well with the hose clamp.  
(It can be made easier by turning the hose clockwise while attaching.)
  - ④ Connect the suction pipe with the antistatic hose and fasten well with the hose clamp.  
(It can be made easier by turning the hose clockwise while attaching.)
  - ⑤ Connect the air hose (ID over 6.5mm) with the Silent-Cleaner. For optimal performance, while connecting, please make sure that the air filter is present in between the connection to prevent rust entering into the device.  
Please make sure that the air valve is closed when connecting the air hose.
  - ⑥ Suction will start as soon as the air cock is turned open on the Silent-Cleaner.
- ★ When the vacuum power is low, please check for the following:
- (1) Air pressure is at sufficient level, or air volume is sufficient.
  - (2) Connecting with the minimum numbers of couplers, or connecting the inappropriate couplers lead to insufficient airflow and may not able to maintain optimal performance.
  - (3) Connecting the air hose with ID over 6.5mm.

★ Caution

- When the vacuum level decreases, it indicates that the filters require a replacement.

**Dust Filter**

- Please replace the dust filter occasionally to prevent the filter from getting clogged, causing excessive vacuum level at the suction area, or the dust flowing to the silent filter.


**Silent Filter**

- Please make sure to supply clean compressed air to prevent the silent filter getting clogged with rust or oil in addition to the dust discharged through the dust filter.

Please use the exclusive model for the liquid since this model is not designed for that purpose.

## How to order the filters

- ① Silent Filter is located inside the Silencer.  
Please specify as SILENT FILTER for SC3T (White 1pc), available from 1pc  
as SILENT FILTER for SC3T (Yellow set of 6pcs).
- ② To order the dust filter (Yellow), please specify as DUST FILTER (SC3T),  
available from 6pcs in 1 set.

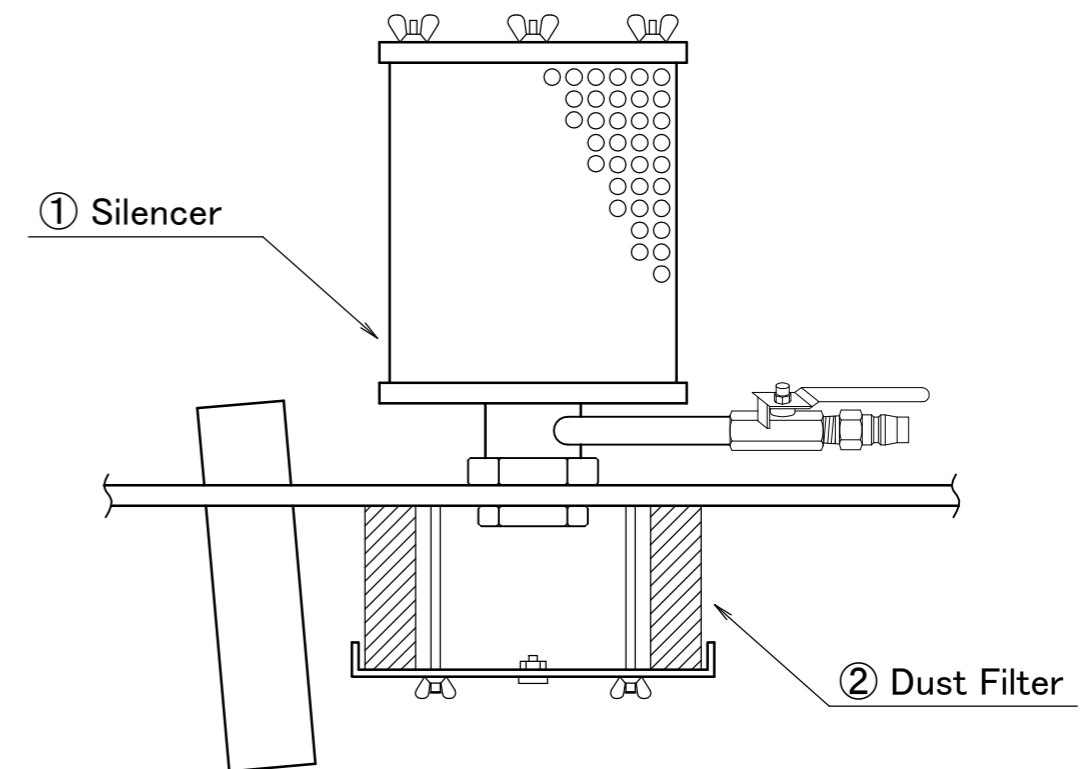

TEL: +81-6-6572-1207

FAX: +81-6-6572-1256

E-mail: [osawa@osawa-company.co.jp](mailto:osawa@osawa-company.co.jp)

In case you have any inquiry, please contact the dealer or the manufacturer.